



OFFROAD RACING BUGGY ACTION!

WORLD OF WHEELS™ 1/10th Baja Racer

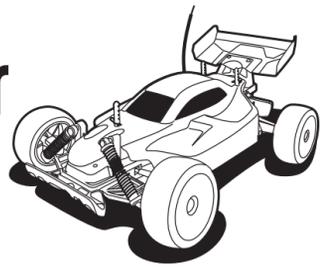

BATTERIES REQUIRED: 1 X 9V cell (sold separately)
WARNING! Always use under direct adult supervision. For use by ages 8 and up.
 Please read instruction booklet carefully before operating Baja Racer.
 Please keep instruction booklet and display box for future reference.
 Parents: examine this toy periodically for potential hazards and repair or replace them.
Any Questions?
 Email our Customer Service Dept.: customerservice@kidgalaxy.com
 Call our Customer Service Dept.: Kid Galaxy Customer Service, Toll Free 1-800-816-1135

PACKAGE CONTENTS

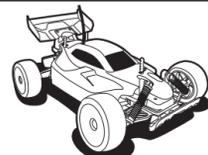

Baja Racer



Transmitter




Rechargeable Battery & Charger




Instructions

PRODUCT DESCRIPTION

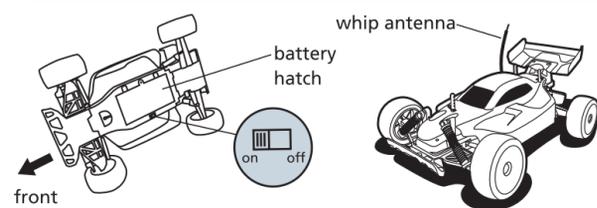


Baja Racer

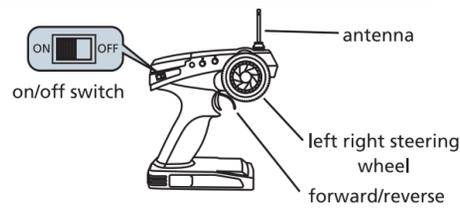


Transmitter

BATTERY INSTALL/REPLACEMENT

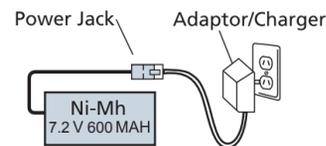


1. Attach battery pack to adaptor as shown.
2. Plug adaptor into AC power outlet as shown.

Battery Pack

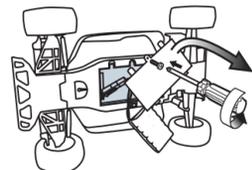

1. Unscrew and remove battery cover with Phillips screwdriver.
2. Insert battery pack in battery box as shown.
3. Plug battery wire into car plug harness fully.
4. Replace battery hatch and fasten in place with screw driver.

Baja Racer

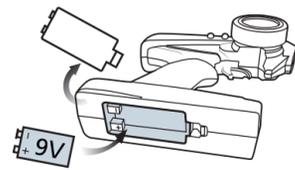

1. Remove battery cover on bottom of controller.
2. Install 9 V battery with polarity as shown in battery box.
3. Replace battery cover.

Transmitter

BATTERY USE IMPORTANT NOTES - PLEASE READ!

 
- Charge battery for 6 hours the first two times. Subsequent charges take only 4 hours.
- After charging, battery will be warm. THIS IS NORMAL!
- After use, battery will be hot! Wait at least 20 minutes before recharging.
- NEVER charge the battery longer than 6 hours. This will damage it!
- When car is not used, disconnect the battery from the car.

OPERATION


- 1 Adjust truck to drive straight ahead by turning adjust tab left or right.




- 2 Start by manually attaching cab to trailer. Drive as desired using throttle and steering joysticks on transmitter.



- 3 To disconnect trailer, press "raise" button on transmitter, support arm lowers and lifts/disconnects trailer hitch. Then, drive cab away.

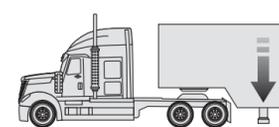

 - 4 To reconnect, manually place or steer cab just ahead of trailer (align in straight line). Press "lower" button on transmitter, trailer support arm lowers and trailer reconnects. Drive away.



Note: If truck is left "on", a 30 second "sleep" function is enabled which saves battery life. Reset power on/off switch to turn vehicle on again.

WARNING!

- 1) Run time for Tractor Trailer is approx. 25-30 minutes.
- 2) Only operate your Tractor Trailer on sidewalks and playgrounds but NOT on roads where traffic is present.
- 3) Avoid using your Tractor Trailer outside when it is raining, snowing, thundering or other poor weather conditions.

PLEASE READ THIS CAREFULLY BEFORE USING.

- When you are running your Tractor Trailer, always keep it in your sight. Keep your Tractor Trailer away from roads or other areas where you might collide with people, pets or cars.
- When you are running the Tractor Trailer, always keep it in your sight. Avoid driving your Tractor Trailer under parked cars, etc.
- Keep your fingers, hair, face and clothing away from the spinning powered rear wheels.
- It is recommended that children should be under adult supervision when they are playing with the Tractor Trailer.
- Keep away from fire or hot and/or humid environments.
- Do not disassemble the product.
- Do not place any objects on the spinning wheels.
- Do not start your Tractor Trailer when the front and rear wheels are unable to turn freely.
- Please keep this toy from children under 8 years old.
- Do not bend, tear, strongly hit or drop the truck, transmitter, antenna shaft, or antenna wire.

The improper use of the controller batteries may cause excessive heat, battery leakage, explosion and damage or lead to injury. Please read the instructions below.

- Only use "AA" alkaline batteries.
 - Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickle-cadmium batteries).
 - Do not mix old and new batteries.
 - Turn off power when installing or replacing batteries.
 - Please install the batteries with the correct polarity, as indicated by the +/- signs.
 - Remove the batteries when the product is not in use.
 - Do not short circuit or disassemble. Keep away from fire.
- Other cautions when using the Tractor Trailer and its controller/transmitter:**
- If any batteries you are using start to leak, carefully remove them without letting them contact any part of the body, properly dispose of batteries and replace with fresh batteries.
 - When other radio controlled products with the same frequency are used nearby, this may cause interference and your Tractor Trailer may not work properly.

FCC REQUIREMENT

CAUTION: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

WARNING:
 CHOKING HAZARD - Small parts
 Not for children under 3 years.

Toll Free Hot Line: 800-816-1135

www.kidgalaxy.com
 Kid Galaxy, Inc.
 150 Dow Street,
 Tower 2, Suite 425B
 Manchester, NH 03101

Kid Galaxy
 Copyright 2012 © Kid Galaxy, Inc.