

# DRIFTING AND RACING CYCLE ACTION!


## World of WHEELS™ CyberCycle

BATTERIES REQUIRED: 5 X "AA" cells, 1 X 9V cell (sold separately)  
 WARNING! Always use under direct adult supervision. For use by ages 5 and up.  
 Please read instruction booklet carefully before operating CyberCycle.  
 Please keep instruction booklet and display box for future reference.


**Any Questions?**

Email our Customer Service Dept.: customerservice@kidgalaxy.com


Call our Customer Service Dept.: Kid Galaxy Customer Service, Toll Free 1-800-816-1135

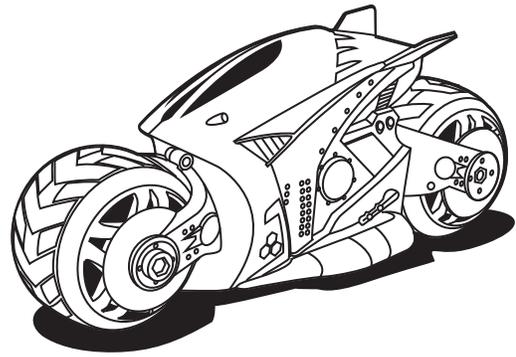


### PACKAGE CONTENTS

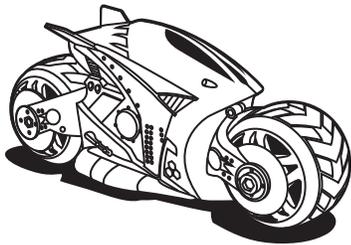

CyberCycle



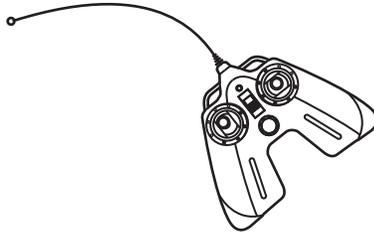


Transmitter



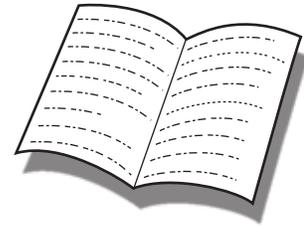


Instructions

### PRODUCT DESCRIPTION

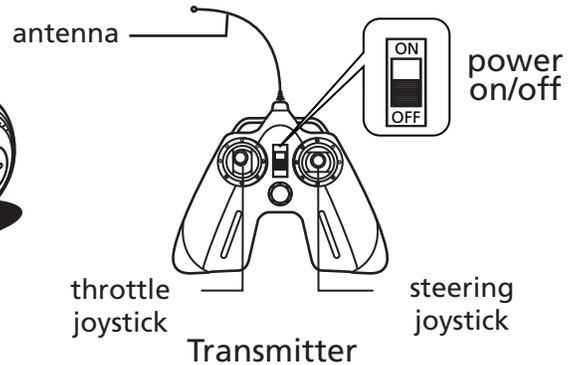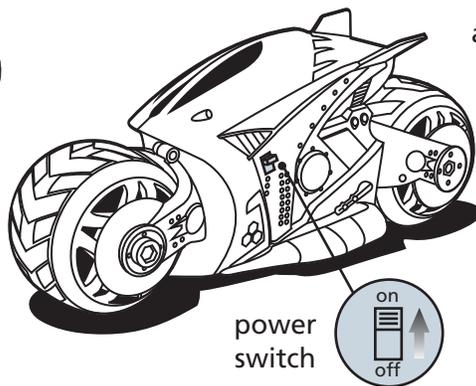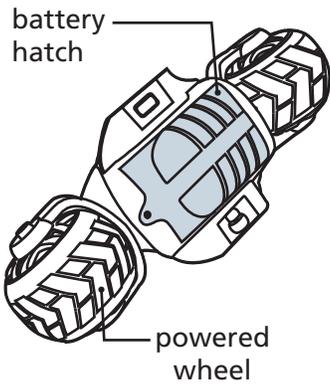

### BATTERY INSTALL/REPLACEMENT

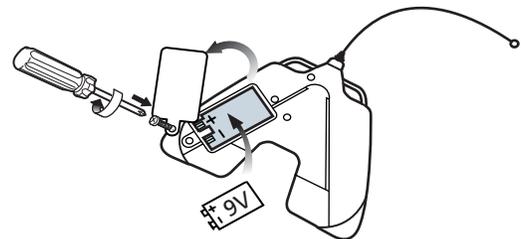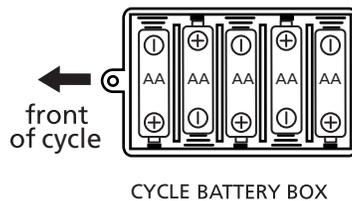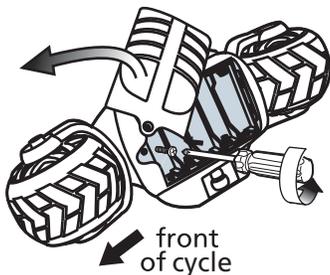

1. Unscrew and remove battery cover with Phillips screwdriver.
2. Insert 5 "AA" batteries with polarity as shown in battery box.
3. Replace battery hatch and fasten in place with screw driver.

Cycle

1. Unscrew battery cover on rear controller with Phillips screwdriver.
2. Install 9 V battery with polarity as shown in battery box.
3. Replace battery cover and fasten in place with screwdriver.

Transmitter