

# Elite Fleet™

## Snap 'n Soar



### User Manual

#### INTRODUCTION

- **Snap 'n Soars** are supersonic-styled gliders. Attach the ultra light glider to the launch slide. With a snap of the wrist, launch the glider. The unique hand-powered launcher emits an authentic jet engine sound at take-off! **Snap 'n Soars** are great for indoor and outdoor flight. They're so easy to fly.....it's a snap!

#### OPERATION TIPS AND HELPFUL HINTS

- **Never** launch Snap 'n Soars directly at people, animals and windows.
- When flying outside, stand clear of trees and power wires as your **Snap 'n Soars** will gain altitude quickly and might get stuck in overhanging tree branches and wires.
- When flying outside, choose relatively calm days as wind can cause your Snap 'n Soar to fly away from you.
- When flying **Snap 'n Soars** indoors, always watch where you launch the aircraft and stay away from windows, televisions, computers and glassware. While **Snap 'n Soars** are lightweight foam-constructed toys, they still should be treated as projectiles.


#### INSTALLATION OF BATTERIES

##### BATTERY REQUIREMENTS:


Launcher: 2 x AAA size alkaline (1.5v) batteries  
(batteries power sound effects only!)

##### Launcher:

1. Unscrew the battery cover on the side of launcher with Phillips screwdriver.
2. Insert 2-AAA batteries with polarities shown in battery compartment.
3. Replace the battery cover and screw shut.

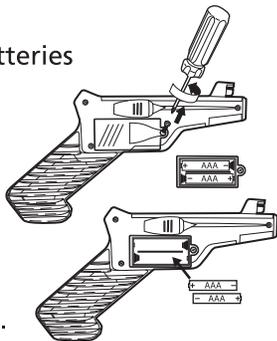


#### HOW TO LAUNCH AND FLY!

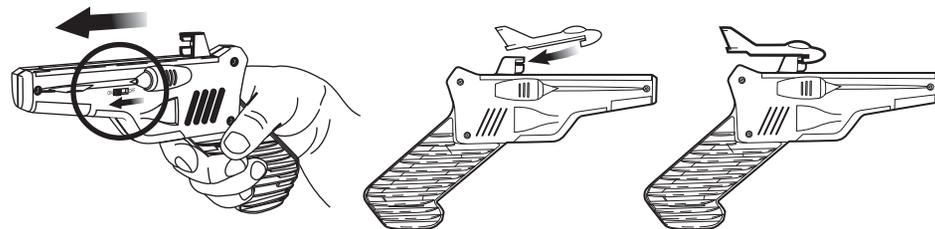

1) Turn switch on launcher to "on".

2) Slip airplane onto launch slide.

3) Plane ready to launch!

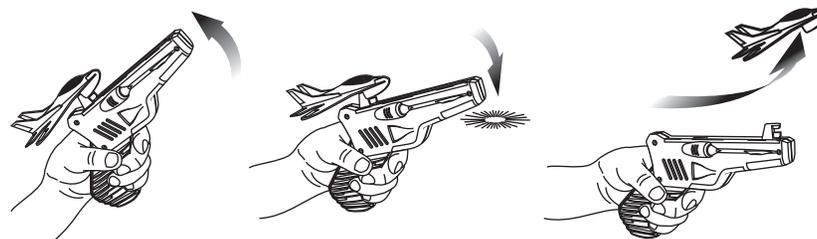

Raise arm and hand/launcher up

Snap arm and hand/launcher down

Slide glides forward and ejects plane



Have fun experimenting by bending wing and tail flaps slightly to alter flight patterns

#### SAFETY PRECAUTIONS

- Do not mix different brands of batteries.
- Do not mix new and used batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (Ni-Cad) batteries.
- Insert batteries carefully observing correct polarities as indicated.
- Exhausted batteries must be disposed of correctly, do NOT burn as batteries may explode.
- Batteries should be disposed of by an adult.

**Toll Free Hot Line: 800-816-1135**

[www.kidgalaxy.com](http://www.kidgalaxy.com)

**WARNING:**  
CHOKING HAZARD - Small parts  
Not for children under 3 years.

**Kid Galaxy®**

Copyright © 2009 Kid Galaxy, Inc.