

 
REAL DRIFTING & RACING ACTION!

World of Wheels™ Mini Slick Drifter


BATTERIES REQUIRED: 4 X "AAA" cells, (sold separately) WARNING! Always use under direct adult supervision. For use by ages 5 and up. Please read instruction booklet carefully before operating Mini Drifter. Please keep instruction booklet and display box for future reference.

Any Questions? DO NOT RETURN TO STORE!


Email our Customer Service Dept.: customerservice@kidgalaxy.com
Call our Customer Service Dept.: Kid Galaxy Customer Service, Toll Free 1-800-816-1135

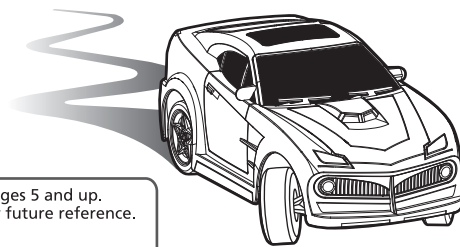


PACKAGE CONTENTS

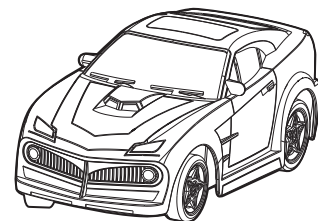 

Mini Slick Drifter

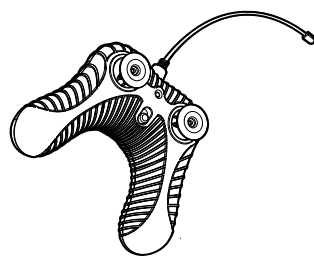 


Transmitter

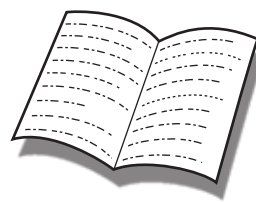 


Instructions

 PRODUCT DESCRIPTION

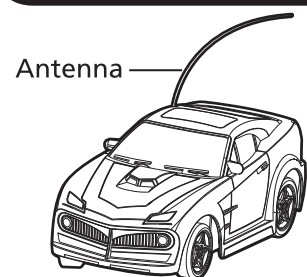


Mini Slick Drifter

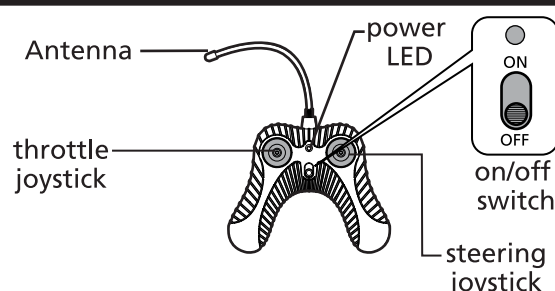 


Transmitter

 BATTERY INSTALL / REPLACEMENT

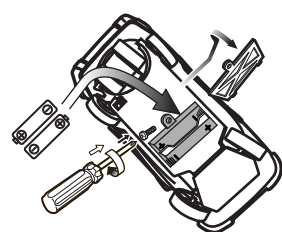

1. Unscrew battery cover on chassis bottom with Phillips screwdriver.
2. Install 2 AAA batteries, with polarity as shown, in battery box.
3. Replace battery hatch and fasten in place with screwdriver.

 
Car

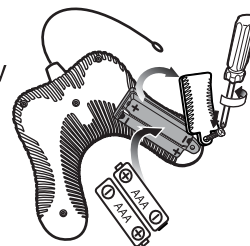

1. Unscrew battery cover on rear of controller with Phillips screwdriver.
2. Install 2 "AAA" batteries with polarity as shown in battery box.
3. Replace battery cover and fasten in place with screwdriver.

Transmitter

 DRIVING YOUR MINI SLICK DRIFTER!

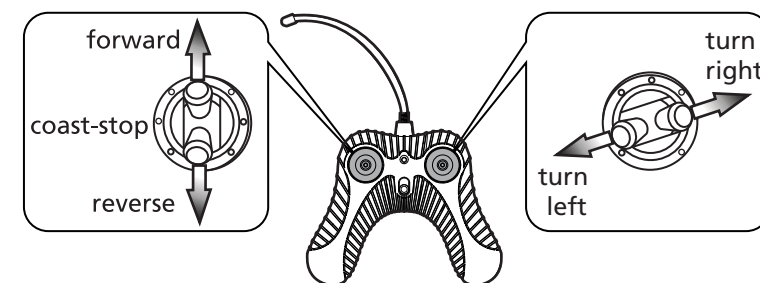


throttle joystick

steering joystick


Basic Operation

 - 1) Turn power switches on both transmitter and car
- 2) Apply steering and throttle inputs slowly at first
- 3) Mini Slick Drifter™ works best on non-smooth surfaces (asphalt, carpet, concrete)
- 4) Steering too severely causes your car to "spin out".

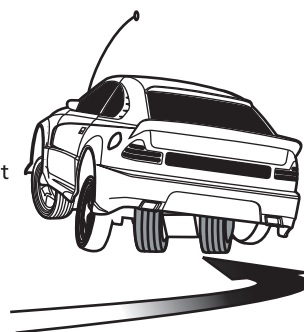

DRIVING YOUR MINI SLICK DRIFTER!

 - 1 POWER SLIDE**
FULL throttle, push steering joystick left or right. As car starts sliding out, release both joysticks.
- 2 DONUT**
FULL throttle, push steering joystick left or right.
- 3 REVERSE 180° DRIFT TURN**
FULL throttle in reverse, full steering left or right.

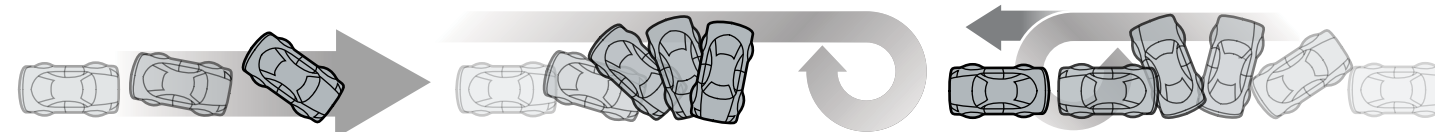

WARNING!

- 1) Run time for Mini Slick Drifter™ is approx. 25-30 minutes.
- 2) Avoid using when it is raining, snowing, thundering, or in strong winds or other poor weather conditions.

PLEASE READ THIS CAREFULLY BEFORE USING.

- Please run your Mini Slick Drifter™ on relatively smooth outdoor surfaces only. Indoors, only drive on low pile or shallow carpet or your car will constantly spin out!
- Keep your fingers, hair, face and clothing away from the spinning rear wheels.
- It is recommended that children should be under adult supervision when they are playing with the Mini Slick Drifter™.
- Keep this product away from children under five years old.
- Keep away from fire or hot and/or humid environments.
- Do not disassemble the product.
- Do not start the Mini Slick Drifter™ when the rear drive wheels are unable to spin freely.
- Do not place any object onto the drive wheels

The improper use of the controller batteries may cause excessive heat, battery leakage, explosion and damage or lead to injury. Please read the instructions below.

- Do not mix alkaline, standard (carbon-zinc or rechargeable (nickle-cadmium) batteries.
- Turn off power when installing or replacing batteries.
- Please install the batteries with the correct polarity, as indicated by the +/- signs.
- Remove the batteries when the product is not in use.
- Do not short circuit or disassemble. Keep away from fire.
- If any batteries you are using start to leak, carefully remove them without letting them contact any part of the body, properly dispose of batteries and replace with fresh batteries.
- When other radio controlled products with the same frequency are used nearby, this may cause interference and your Mini Slick Drifter™ may not work properly.
- Do not bend, tear, strongly hit or drop the car, transmitter, antenna shaft, or antenna wire.

FCC REQUIREMENT

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or Modifications not expressly approved by the party responsible could void the user's authority to operate this device.

KID GALAXY INC. LIMITED WARRANTY

Kid Galaxy's products are covered under a 60 day limited warranty against manufacturer's defects. If a product is deemed defective and falls within the 60 day period, Kid Galaxy will repair or replace it at no charge. We require a copy of the original sales receipt to validate the purchase. Product must have been purchased within the US or Canada to be eligible. Please email us at: customerservice@kidgalaxy.com or call us.

WARNING:
CHOKING HAZARD - Small parts
Not for children under 3 years.

Toll Free Hot Line: 800-816-1135

www.kidgalaxy.com
Kid Galaxy, Inc.
150 Dow Street, Suite 425B
Manchester, NH 03101

Kid Galaxy

Copyright 2010 © Kid Galaxy, Inc.